

Troubleshooting:

No sound.

- ❑ Make sure the cable inputs are properly connected into correct sockets. Make sure you have selected output & volume control on your amplifier. Check that amplifier is operating OK.

USER MANUAL

ORATOR Passive Stage Speaker

P10



Read this manual carefully to ensure safe operation and to get excellent acoustics from the speaker.

Supplied By:
Audio Visual Engineering Pty Ltd
PO Box 7119, Wilberforce NSW 2756
Phone: (02) 8207 3141 Mobile: 0438 676 558
Email: info@audiovisualengineering.com.au

Dear Customer,

You are now the proud owner of the **ORATOR** P10 speaker. This speaker offers 120W RMS of power output, and connections to input your audio signal from the amplifier. It does not require its own power supply.

Safety/Warning Notes:



For any service and repair, contact ABI as per the details below. Do not attempt to remove the cover or to replace any parts without first contacting ABI or a qualified service agent.



To prevent fire or electric shock, do not expose this speaker or the power supply to rain or moisture.

Operation of the P10:

The P10 is a passive speaker, without an amplifier or power unit. It is designed to connect to an amplifier or amplified speaker as a “slave” speaker. All audio controls & power come from the amplifier.

Moving/Mounting the Speaker:

The P10 has a hand slot at the top for transport and lifting, plus a 35mm mounting socket under the base of the speaker. Tripods stands and wall mount brackets are available to suit this socket, for easy speaker mounting.

Specifications of the PA10:

Speaker Unit:	1 x 10" bass + 1 x 3" treble
RMS Output:	120W
Impedance:	8 ohms
Frequency Response:	50Hz - 20 kHz
Separation:	>48 dB
S/N ratio:	97 dB
Input:	1 x 6.3mm phono socket



For any service or operation queries, contact ABI or your local **ORATOR** Dealer.
ABI can be contacted on 02.9938 6866 or info@abimage.com.au.