



Supplied By:  
Audio Visual Engineering Pty Ltd  
Ph: (02) 8207 3141  
info@audiovisualengineering.com.au

# ORATOR AUDIO



## SB002 SOUNDBAR User's Guide

© 2014 Brighter Image  
Unit H/134-140 Old Pittwater Rd, Brookvale NSW 2100  
PO Box 7289, Warringah Mall NSW 2100 Australia  
T: 02.9938.6866 F: 02.9938.6899  
W: www.abimage.com.au E: info@abimage.com.au

## USER'S GUIDE

Please read this user's guide before using your new Soundbar.

For any technical enquiries, contact ABI Pty Ltd on:  
02.9938 6866 or E: [info@abimage.com.au](mailto:info@abimage.com.au)



### Package Contents:

- Soundbar
- Mounting Bracket
- AC Power Adapter
- Remote Control
- AUX-In Cable
- Line In Cable
- User's Manual

### Features

- Provides powerful sound to enhance your listening experience
- Easy connection to your devices
- Remote for convenient control from a distance
- Built in Bluetooth to stream music from your Smartphone or Tablet
- Built in MP3 Player so you can play MP3 music from a USB or SD card
- Built in FM Radio

### Specifications:

Power Input: DC 16V

Output (RMS): 60W

Frequency Response: 60 Hz -20 kHz

Speaker Units: 3" Bass x 2 + 2.5" Mid-Tweeter x 2 + 3" Bass x 1

Audio Input: Aux in/Line in/USB & SD MP3 /Bluetooth 2.1

Audio Output: Sub Out

Other Functions: FM Radio

Dimensions: 940 x 100 x 75; Weight: 2.7 kgs

Specifications are subject to change and improvement without notice.

### Limited Warranty

ABI warrants this product against defects in materials and workmanship under normal use by the original purchaser for one (1) year after the date of purchase.

ABI MAKES NO OTHER EXPRESS WARRANTIES. This warranty does not cover:

(a) damage or failure caused by or attributable to misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current;

(b) improper or incorrectly performed repairs by persons who are not a ABI Authorised

Service Facility;

(c) consumables such as fuses or batteries;

(d) ordinary wear and tear or cosmetic damage;

(e) transportation, shipping or insurance costs;

(f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original Purchaser.

Should a problem occur that is covered by this warranty, take the product and the sales receipt as proof of purchase date to the place of purchase. ABI will, at its option, unless otherwise provided by law:

(a) repair the product without charge for parts and labour;


(b) replace the product with the same or a comparable product; or

(c) refund the purchase price.

ABI disclaims all warranties and conditions not stated in this limited warranty.

Except as described above, ABI shall have no liability to the purchaser of the product or any other person or entity with respect to any liability, loss or damage caused directly or indirectly by use or performance of the product or arising out of any breach of this warranty, including but not limited to, any damages resulting from inconvenience and any loss of time, data, property, revenue or profit and any indirect, special, incidental, or consequential damages, even if ABI has been advised of the possibility of such damages.

## Remote Control Instructions

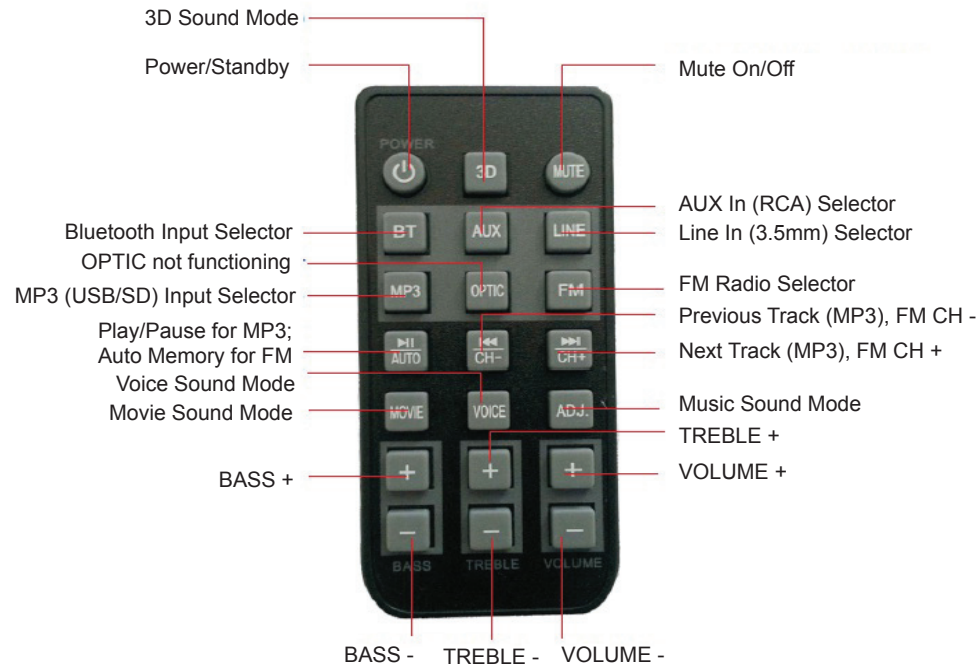

## Important Safety Instructions

1. Read & follow these instructions. Keep these instructions as a reference.
2. Heed all warnings.
3. The power source must supply 16V DC. Its centre tip must be set to positive and its plug must fit the DC IN jack. Using an adapter that does not meet these specifications could damage the soundbar or adapter. Use the power adapter supplied.
4. Do not use soundbar near water.
5. Clean only with dry cloth.
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
7. Do not install near any heat sources such as radiators, heat outlets, stoves, or other apparatus including amplifiers, that produce heat.
8. Use only attachments/accessories specified by the manufacturer.
9. Protect the power adapter cord from being walked on or pinched, particularly at plugs and the point where they exit the soundbar.
10. Unplug soundbar during lightning storms or when unused for long periods of time.
11. Refer all servicing to qualified service personnel. Servicing is required when the soundbar has been damaged in any way, such as if the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the soundbar, it has been exposed to rain or moisture, it does not operate normally, or it has been dropped.


## Troubleshooting

Problem	Solution
No Sound	Make sure the AC adapter is plugged into a working outlet and firmly connected to the sound bar. Check the connection of your device to the sound bar.
Distorted sound	Check your source device to see if it is causing the distortion. Set the device and the sound bar volume to a lower level.
Unbalanced sound	If the volume remains low even then the soundbar's volume is turned all the way up, check the source device to make sure it is connected via a variable output. Make sure the output is not turned down too low.


## Warnings and Precautions

- To reduce the risk of electric shock, do not remove cover (or back). There are no user serviceable parts inside.
- Do not expose the soundbar to dripping or splashing liquids. Do not place objects filled with liquids (such as vases) on the soundbar.
- The power adapter plug is used as the disconnect device. It shall remain readily operable and should not be obstructed during intended use. To completely disconnect the soundbar from supply mains, the power adapter plug of the product shall be disconnected from the mains socket outlet completely.
- Using the soundbar near fluorescent lighting may cause interference with the remote. If the soundbar is behaving erratically, move away from any fluorescent lighting.

## Soundbar Operation

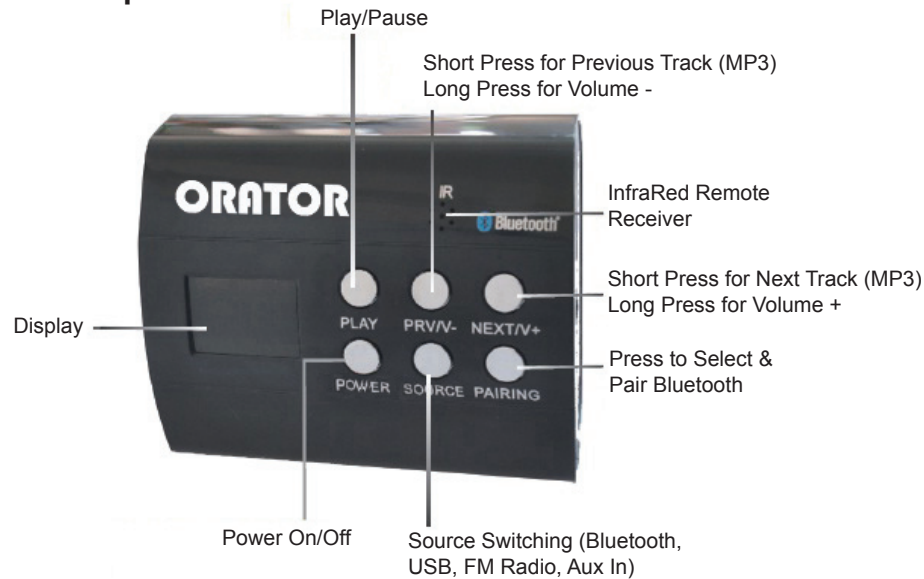

## Connections

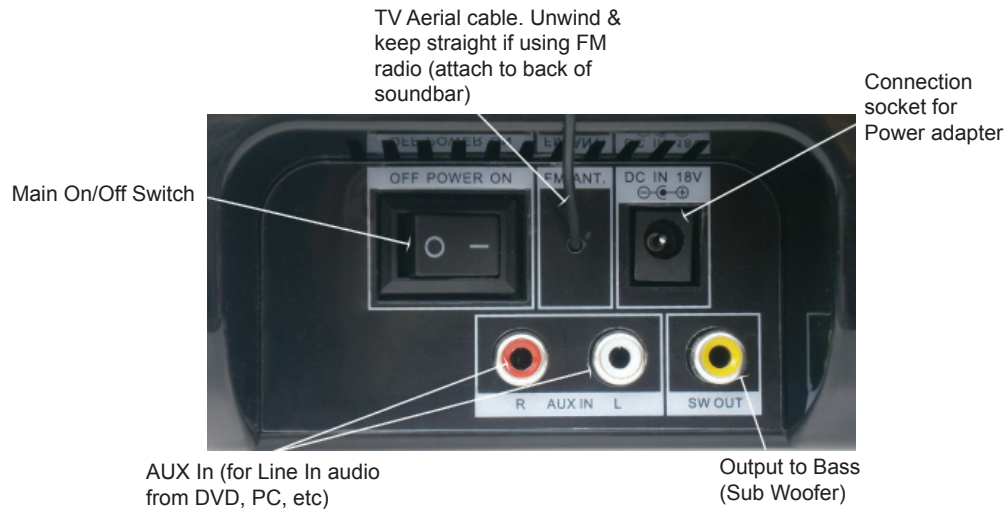

Line In audio for "Headphone" (amplified) signal (from Smartphone, Notebook, TV, Tablet, etc).

USB Port (plays MP3 audio)

Micro SD card port (plays MP3 audio)

## Mounting the Soundbar


For mounting the soundbar to a wall, you may need a drill, a marker pen or pencil, a bubble level, two screws, and two drywall anchors (optional).

1. Locate a place for mounting the soundbar. Make sure you have enough room for both ends of the sound bar to present unobstructed sound transmission.
2. Use the supplied mounting template to mark two screw hole positions. Use two screws (not supplied) with heads no bigger than the sound bar's mounting holes.
3. Align the soundbar's mounting holes with the screw heads and slide down to secure the soundbar.

To wall mount the soundbar with an Astralvision Touchscreen, use the standard mount brackets, and then connect the soundbar to the touchscreen using the 3.5mm cable included.

To mount the soundbar to an ABI mobile stand, use the soundbar plate supplied with the mobile stand.

After you connect the AC adapter, the soundbar enters standby mode.

1. Turn on your device and turn down its volume.
2. Press  to turn on the soundbar, and turn down its Volume.
3. Press LINE or AUX or BT or FM on the remote to switch to LINE or AUX mode or BT mode or FM Radio mode.
4. After starting playback on your device, adjust the device and soundbar volume to a comfortable level.



Note:

The sound bar enters standby mode if you pause it for more than 15 minutes.